SWEDX

User's Guide
LV-32X11
LV-37X11
LV-40X11
LV-46X11

www.swedx.com

SWEDX wave

SWEDX TV-Stand

SWEDX Soundbar

Wall-mount / Tilt

SWEDX offers a wide range of accessories with professional design and functionality for LED/LED-TVs

SWEDX shelves

Wall-mount Retractable

SWEDX Matrix Screens

Wooden Wall-mount

INDEX Page

Introduction 4
Basic operation 5
Contents 6
Control buttons 6
Inputs 6
Remote control buttons 7
Main Operations 8
Volume Control 8
OSD Menu Operations 8
OSD Menu Structure: 8
Menu > OPTION 9
Menu > Channel 9
Menu > Channel (DTV) > Auto Scan 9
Menu > Channel > DTV Manual Tuning 9
Menu > Channel > ATV Manual Tuning 10
Menu > Channel > CADTV Manual Tuning 10
Menu > Channel > Dish Setup 10
Menu > Channel > Program Edit 12
Menu > Channel > Signal Information 12
Menu > Channel > PVR File System 12
Menu > Channel > Record Start 13
Menu > Channel > Recorded List 13
Menu > Channel > Recorded Mode 13
Menu > Channel > Schedule List 14
EPG Function 14
Time Shift Function 14
Menu > Picture 15
Menu > Picture > Picture Mode 15
Menu > Picture > Color Temperature 15
Menu > Picture > Aspect Ratio 15
Menu > Picture > Noise Reduction 15
Menu > Picture > Screen 15

Page

Menu > Sound > Sound 15
Menu > Sound > Sound Mode 15
Menu > Sound > Balance 15
Menu > Sound > Auto Volume 16
Menu > Sound > Surround Sound 16
Menu > Sound > SPDIF Mode 16
Menu > Sound > EQ 16
Menu > Time 16
Menu > Time > Clock 16
Menu > Time > Off Time 16
Menu > Time > On Time 16
Menu > Time > Sleep Timer 16
Menu > Time > Auto Sleep 16
Menu > Time > Time Zone 16
USB Media Player 17
Remote Control Keys used in USB Mode 17
Text-TV / Teletext 18
Product base assembly 19
Wall mount assembly 19
Troubleshooting 20
Warranty and Service 21
Dead on Arrival (DOA) 21
How to get service 22
SWEDX technical support service 22
Limitation of liability 22

Introduction
Thank you for choosing SWEDX LED/LED-TV. Please read this manual thoroughly before operating the product. Make sure the display was not damaged in transit. Should the product be damaged, please contact your dealer and do not install it. Check that you have all the accessories according to the model.

Safety precaution
- Do not place the product on unstable places, from which it may fell off.
- Do not expose the product to extreme temperature and humid environment.
- Avoid subjecting the product to direct sunlit and other heat sources.
- Do not put the product into any liquid.
- Do not put anything inside the product, or place water container on top of the it.
- In thunder rainy days (especially with lightening), please unplug the power and antenna cables.
- Do not step on the power cable, or tangle them together
- Avoid overload of the exterior electric outlet to prevent fire hazard of electric shock.
- Clean the product with dry and soft cloth.
- If your product is broken, do not repair it by yourself, but contact the maintenance personnel.
- If the remote control is left unused for a longtime, please take the batteries out and store them in dry places.
- Avoid dropping the remote control.
- If the product is installed for exhibition purpose, please do not place the overheated part on the ground or carpet to prevent accident.

Please install the product at proper position, such as wall or ceiling. Please install it under the guidance of professional staff. (When used or exhibit, please do not place the product horizontally or vertically on the ground).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment is predeterminated to work constantly (unless adding switch on this equipment)
Please disconnect the power cord if this equipment will not be used for a long time.

Precautions When Displaying a Still Image
A still image may cause permanent damage to the screen.
- Do not display a still image on the screen for more than 2 hours as it can cause screen image retention. This image retention is also known as "screen burn". To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image.
- Watching the screen in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and center of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console may cause a similar effect to the screen. Damages caused by the above effect are not covered by the Warranty.
- Displaying still images from Video games and PC for longer than a certain period of time may produce partial after-images. To prevent this effect, reduce the ‘brightness’ and ‘contrast’ when displaying still images.

Basic operation

- Use AC 100-240V 50-60 Hz power outlet for the product power supply.
- If the screen of the product is not on, please press the power button on the remote control or on the product.
- If you want to shut off the product temporary, please press the power button on the remote control or on the product.
- If you want to shut off the product completely, please switch off the power switch ON/OFF or disconnect the power cable.
- In TV/AV state, the product will enter idle state if there is no signal input within 3 minutes.
- In PC state, the product will enter idle state if there is no signal input within 2 minutes.
- The setting and tuning of picture and sound will be saved when the product is shut off, which will be working in the pre-shut off state when the product is turned on again.
- If PC signal source is used, please first set the resolution of the PC display card as the following modes: (1920x1080 60 Hz for Full HD models and 1366x768 for HD models).
- If there is progressive output of the signal used by the user, signal source with progressive output is recommended.

Preparation

- Put the product on a stable surface.
- Do not fix the product with others fixations than those provided or suggested by the manufacturer.
- If you have a wall mount, check that it is steady.
- Do not place any material on the product.
- Do not block or cover the ventilation openings on the product.
- The product must be plugged with a tension source of 110-240 volts and 50-60 Hz.
- Power cord and cables must be properly routed and protected to prevent from stepping on them.
- Keep the power cord away from any heat source. Possible fire hazard.

Heating sources and humidity

- Keep the product dry and away from humidity.
- Keep the product away from heat sources.

Cleaning and maintenance

- Unplug the product before cleaning it. Do not use solvents or liquids to clean the product.
- Only clean the product with a soft and dry cloth.
- In case of troubleshooting, do not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks, short-circuits fire or others incidents. Please contact a technical authorized by SWEDX brand.

Departure in holidays

- Unplug the product during lightning storms or when unused for long periods of time.

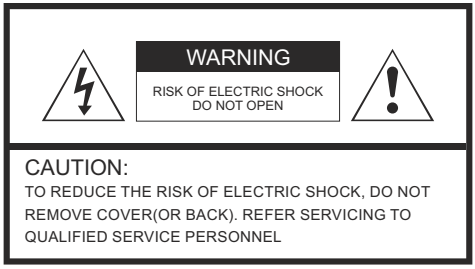
WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER(OR BACK). REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

Contents
Included items:

2 x AAA Battery | Notice | AC Cable

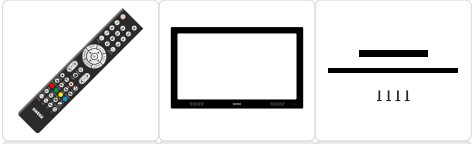

Remote Control | LED/LED-TV | Base + Screws

Control buttons:
The control buttons's outlook on your SWEDX LED-TV is on the bottom or on the side. This option is not available in all models.

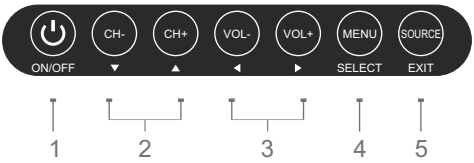

1. ON/OFF
Power switch ON/OFF
2. CH+/-
Zap the channels / Navigate the OSD menu
3. Vol+/-
Decrease and increase the audio volume / Navigate the OSD menu / Adjust values in the OSD
4. Select/Menu
Activate the OSD menu / Select in the OSD menu or Sources
5. Source/Exit
Activate the input source menu / Exit the OSD menu

Inputs

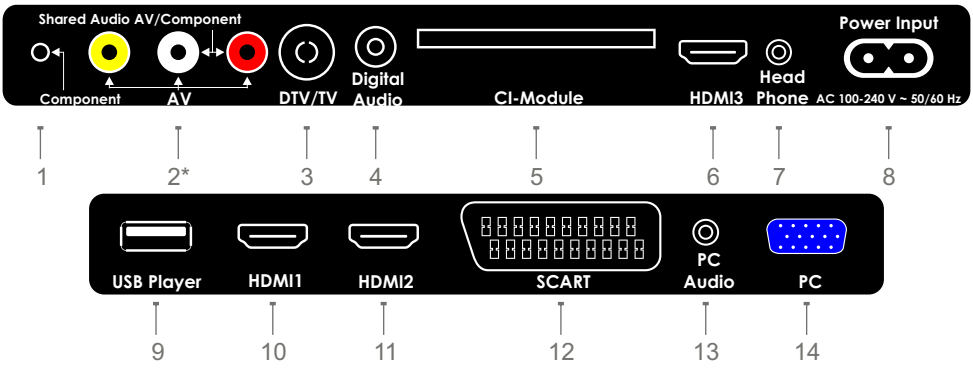

Inputs

1. Component
Input for component sources (YpBpR)
2. AV
Input for audio/video sources
**Component and AV shares the same audio input*
3. DTV/TV
Input for DTV and analog TV signal
4. Coaxial
Output for digital audio signal (coaxial)
5. CI-Module
Input for CA-module (card reader)
6. HDMI3
Input 3 for HDMI sources
7. Headphone
Output for headphone devices
8. Power Input
Input for 100-240 V power
9. USB
Input for USB Media Player
10. HDMI1
Input 1 for HDMI sources
11. HDMI2
Input 2 for HDMI sources
12. SCART
Input for SCART sources
13. PC Audio
Input for PC audio when PC input is connected
14. PC
Input for PC or VGA sources

Design and specifications are subject to change without notice.

Remote control buttons

1. On/Off button
2. Number buttons for direct channel access
3. Display additional information
4. List TV-channels
5. EPG (Electronic Program Guide)
6. Navigation button *UP*
7. Navigation/adjust button *LEFT*
8. Menu display. In OSD sub-menu press to access previous menu
9. Available sources selection
10. Picture freeze
11. Volume increase
12. Volume decrease
13. Enter sleep mode in certain chosen time
14. Start/Pause play, Start/Paus time shift/alter Teletext mix
15. Stop play/activate Teletext
16. Fast forward/Teletext index
17. Fast backward/ Teletext cancel
18. Fast-text topic selection in Teletext *GREEN*
19. Fast-text topic selection in Teletext *RED*
20. Choose Audio/ language in DTV/USB media player
21. Aspect Ratio selection
22. Shortcut to USB
23. Shortcut to HDMI1,2,3
24. Mute the built-in speakers
25. Previous TV channel in DTV/TV
26. Display favorite channels list
27. Confirm/activate button
28. Navigation/adjust button *RIGHT*
29. Exit the OSD
30. Navigation button *DOWN*
31. Next channel. When the channel list is displayed, it scrolls down to next page in the list
32. Previous channel. When the channel list is displayed, it scrolls up to previous page in the list
33. Instant Recording/ Teletext size selection
34. Display Recorded List/Hold Teletext
35. Previous Title/Display time in Teletext
36. Next Title and Reveal Teletext
37. Fast-text topic selection in Teletext *Yellow*
38. Fast-text topic selection in Teletext *Blue*
39. Activate subtitles in DTV/USB media player
40. Alter TV/Radio Channels mode
41. Shortcut to AV
42. Shortcut to DTV/TV

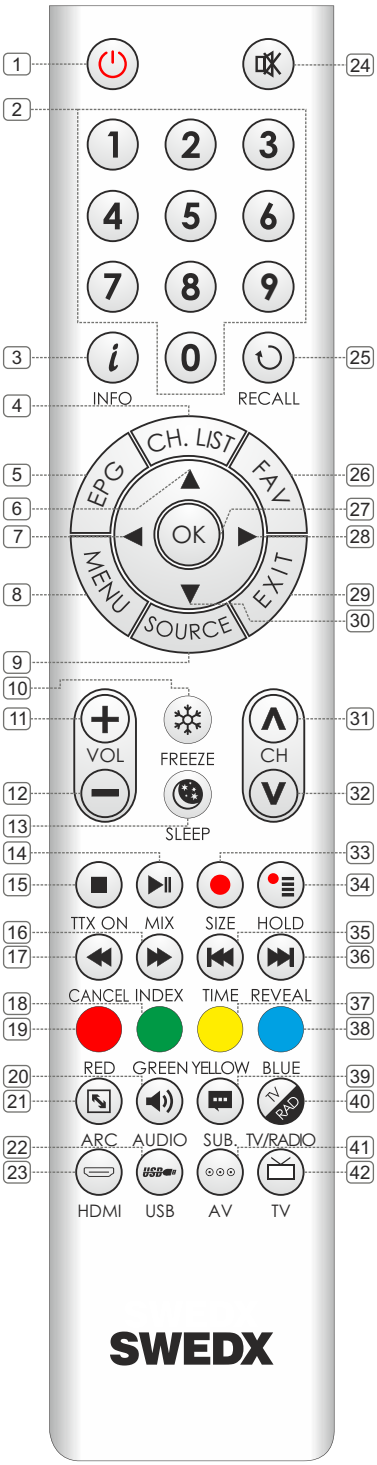

Main Operations

Turning On And Off

Press Power button on the remote control or the On/Off button on the control buttons. The product will turn on and will be ready to be used.

Select Source

Press Source button on the remote control. Then you can see the source list menu shown to the right. Press Navigation Up/down button on the remote control to select the source and confirm by pressing Enter.

Volume Control

Press VOL+ / VOL- button on the remote control to adjust the
volume level.
Press MUTE button on the remote control when you need to mute the sound.



OSD Menu Operation

- Press **MENU** button on the remote control to access the OSD Menu. Pressing the same button again will move you backward in the OSD structure.
- Press **ENTER** button to confirm/select.
- Use **LEFT** & **RIGHT** buttons to navigate or change the parameters of the current sub-menu.
- Use **UP** & **DOWN** buttons to navigate in the OSD Menu.
- Press **EXIT** button to exit the OSD Menu.

OSD Menu Structure

- OSD (On Screen Display) allows users to control or adjust various features and settings in accordance with his/her preferences.
  •Press the MENU button on the remote control to see the main OSD menu.

OSD Menu Operation:

- Main Menu: Press the MENU button on the remote control to enter the main OSD menu. First, choose Main menu item you need with the buttons ◄ & ►.
  To select a Main menu items, just press Enter or Navigation button ▼ on the Remote Control.
- Sub Menu: Each menu item has its own sub menu items to set.
- Sub Menu items:
  A: If there is no value to adjust it means there is a sub menu which you can access by pressing Enter and modify the menu values. Select sub-menu item with ▲ & ▼ buttons on the remote control and press Enter button to enter the submenu or change the value.
  B: If there is no ► part, the item has adjustable values. Use the ◄ & ► buttons to adjust the values.
  C: If the sub-menu item is grey colored, it means this item is not available in the particular mode.

Menu > OPTION

In this Menu you can choose the setup settings for your product.

OSD Language: Choose the OSD language
Audio Languages 1st: Choose the first preferred audio language (for digital channels)
Audio Languages 2nd: Choose the second preferred audio language (for digital channels)
Subtitle Languages 1st: Choose the first preferred subtitle language (for digital channels)
Subtitle Languages 2nd: Choose the second preferred subtitle language (for digital channels)
OSD Duration: Choose the OSD Menu duration in time
Country: Choose your country to load predefiened parameters matching your country
Restore Settings: This function will restore the product to the original settings

Menu > Channel (DTV)

In this Menu you can search for TV-channels manually or automatically, manage the TV channels such as deleting, adding to favourites, skipping and locking. You can also use the PVR function which allows to record or time shift TV-programs.

Menu > Channel (DTV) > Auto Scan
Choose **Auto Scan** to start searching for TV-Channels (analog/Digital). When you choose **Auto Scan** TV will start searching for available channels. When the TV has finished searching it will store the available channels automatically.

Press Menu
Choose Channel Menu
Press Enter or Move down with the down arrow
Press Enter to start Auto Scanning

Menu > Channel (DTV) > DTV Manual Tuning

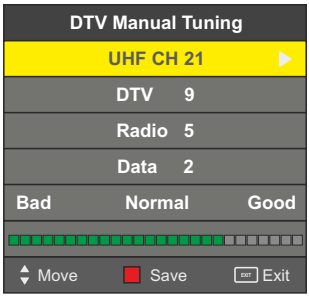

Choose **DTV Manual Tuning** to start searching for TV-Channels (Digital) manually.

Press Menu
Choose Channel Menu
Press Enter or Move down with the down arrow
Choose DTV Manual Tuning
Navigate right or left to choose the Frequency
Press Enter to start manual search
To access the stored channels press **LIST** button on the remote control.

Menu > Channel > ATV Manual Tuning

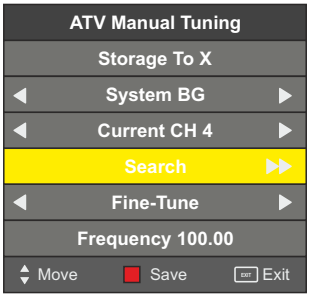

Choose **ATV Manual Tuning** to start searching for TV-Channels (Analog) manually.
Press Menu
Choose Channel Menu
Press Enter or Move down with the down arrow
Choose ATV Manual Tuning
Choose which channel to save too
Choose Search to start manual search. When a TV channel is found, do a fine tuning if necessary and thereafter press RED button to save the TV channel.
To access the stored channels press **LIST** button on the remote control.

Menu > Channel (CADTV) > CADTV Manual

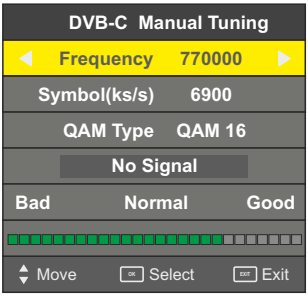

Tuning

Choose CADTV **Manual Tuning** to start searching for TV-Channels (Digital) manually.
Press Menu
Choose Channel Menu
Press Enter or Move down with the down arrow
Choose DVB-C Manual Tuning
Navigate right or left to choose the Frequency
Press Enter to start manual search
To access the stored channels press **LIST** button on the remote control.

Menu > Channel > Dish Setup

Note: This feature is available only if your product is equipped with DVB-S/S2.
In the **Dish Setup Menu** you can setup the built-in satellite receiver. You can scan the listed

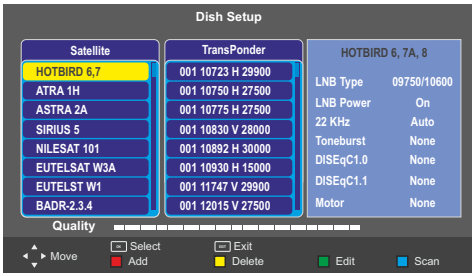

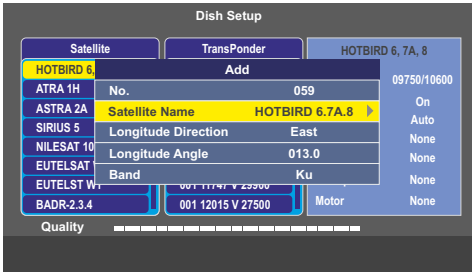

satellites/frequencies, edit them and add new satellite. You can also setup additional equipments such as DiSEq and motor.
Press Menu
Choose Channel Menu
Press Enter or Move down with the down arrow
Choose Dish Setup and press Enter

To Add a new satellite press RED button
To Edit the highlighted satellite press Green Button

To Delete a satellite press Yellow button

To Scan one or several satellite, highlight the satellite and press Enter (the ► icon will appear ahead of the chosen satellites). Continue until you have marked all desired satellites. Press BLUE button to start scanning the chosen satellites

LNB Setup
In the LNB menu please setup up your LNB's parameters such as type low/high value, power and 22 Khz.

For more information please contact your dealer/service provider for the equipment connected to your SWEDX LED.

Menu > Channel > Dish Setup

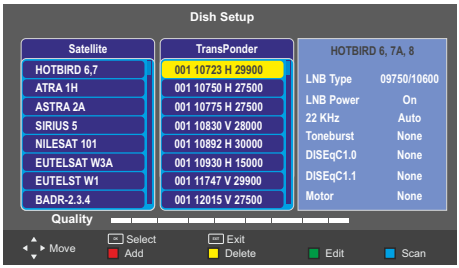

In the **Dish Setup Menu** you can edit/add transponders.

Press Menu
Choose Channel Menu
Press Enter or Move down with the down arrow
Choose Dish Setup and press Enter
Choose the desired satellite and press Right button to move to Transponders window.

To Add a new transponder press Red button
To Edit the highlighted transponder press Green Button
To Delete a transponder press Yellow button
To Scan one or several transponders, highlight the transponder and press Enter (the ► icon will appear ahead of the chosen transponder). Continue until you have marked all desired transponders. Press BLUE button to start scanning the chosen transponder.

Menu > Channel > Dish Setup

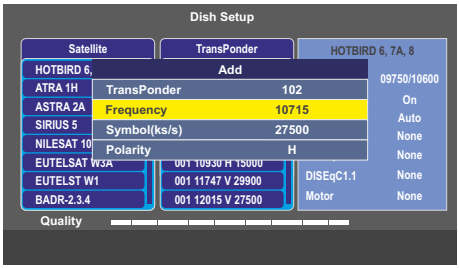

In the **Dish Setup Menu** you can setup the DiSEqC to connect several LNB:s.

Press Menu
Choose Channel Menu
Press Enter or Move down with the down arrow
Choose Dish Setup and press Enter
Choose the desired satellite and press Right 2 times to move to the LNB window
Choose corresponding DiSEqC model and choose the LNB port for the LNB directed to the highlighted satellite. Repeat the same procedure for all DiSEqC ports and thereafter press Blue button to scan the satellites

Menu > Channel > Dish Setup

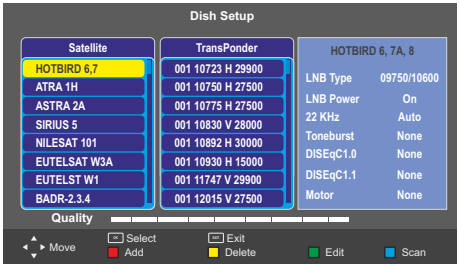

In the **Dish Setup Menu** you can setup a dish with a DiSEqC motor.

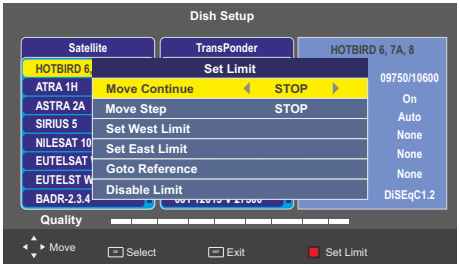

Press Menu
Choose Channel Menu
Press Enter or Move down with the down arrow
Choose Dish Setup and press Enter
Choose the desired satellite and press Right 2 times to move to the LNB window
Choose corresponding motor model to your motor and set the parameters for it such as limits, positions.

Menu > Channel > Program Edit

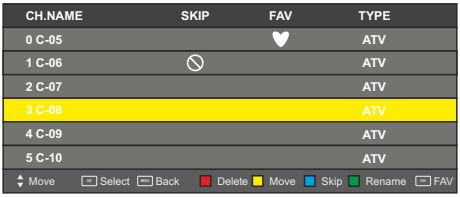

In **Program Edit Menu** you can:
Delete a channel (*use Red button*)
Move a channel (*press Yellow button, choose new position, press Enter*)
Skip a channel (*use Blue button*)
Rename a channel (*press Green button, change the channel name using the arrow buttons*)
Add a channel to favorits list (*use FAV button*)

To access **Program Edit Menu** do the following
Press Menu. Choose Channel Menu
Press Enter or Move down with the down arrow
Choose Program Edit

Menu > Channel > Signal Information

Choose **Signal Information Menu** to display detailed information about the signal quality, strength and other details.

Menu > Channel > CI Information

Choose **CI Information Menu** to display detailed information about the Common Interface Module you have inserted in the CI-slot.

To watch paid channels, the “CI or CI+ CARD” must be inserted. If you don’t insert the “CI or CI+ CARD,” some channels will display the message “Scrambled Signal”.

Menu > Channel > PVR File System

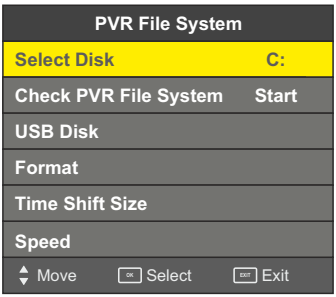

Use the **PVR File System Menu** to prepare your LED to record DVB-T programs and use the Time Shift function. In order to record or time shift programs you need to connect a USB-memory or an Externa Hard Drive to your LED.

The first time you connect a USB-memory or external hard drive you will need to format it in the PVR File System. All data on the USB-memory or external hard drive will be erased, therefore please backup any data before formatting in the PVR File System.

To access **PVR File System Menu** do the following
Press Menu. Choose Channel Menu
Press Enter or Move down with the down arrow
Choose PVR File System and press Enter

Menu > Channel > PVR File System

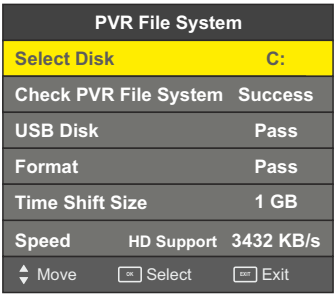

Select Disk: Choose the disk you want to use

Check PVR File System: Choose to check the disk status and compatibility

USB Disk: It provides information if the disk is status

Format: Choose to format the disk. Two formatting standards are available, FAT32 and Hi Speed FS. You can also choose the PVR File System Size you want to format. After formatting the LED will report the estimated recording time for the formatted disk both for Standard Definition and High Definition recording and let you choose the Time Shift Size (see *Time Shift Function* for more information)

Menu > Channel > Record Start

Use the **Record Start Menu** to start recording a program. When you start the recording a menu will be displayed where you can control the recording and get information about the current recording time, max recording time and channel number and name. When you stop the recording the LED will save the recording to the disk. The file format for saving is .TS (MPEG-2 transport stream)

You can start the recording instantly by pressing the recording button on the remote control

Menu > Channel > Recorded List

Use the **Recorded Start List Menu** to display a list of the recorded programs. The Recorded List

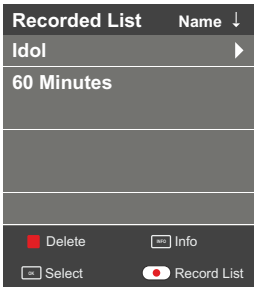

Pressing the RED button will delete the recorded program
Pressing Enter button will play the recorded program
Pressing Info button will display information about the recorded program such as date, time, duration, program title, channel name and program description
Pressing the Recorded List button will change the sorting. 3 types of sorting alternatives are available, by channel name, time and program title.

Menu > Channel > Recorded Mode

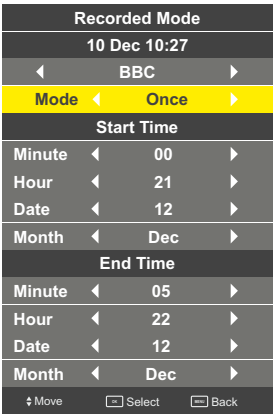

Use the **Recorded Mode Menu** to schedule recordings. In the Recorded Mode Menu you can choose the following
Channel to Record
Recording Mode: Once, daily, weekly, auto
Time to start the recording
Time to end the recording

All scheduled recordings will be listed in the recording list.

Note: You can turn off the LED after scheduling the recordings. The LED will execute the recording schedule while it is off. While recording the LED's LED (power indicator) will flash.

Menu > Channel > Schedule List

In the **Schedule List Menu** you can review the scheduled recordings and reminders
A reminder can be scheduled in the **EPG Menu**
Press the RED button to delete a recording or a reminder

EPG Function

The **EPG** (Electronic Program Guide) function displays the programs information. In this menu you can schedule a recording or a reminder.

Press the GREEN button to schedule a reminder. The LED will switch automatically to the scheduled program when the reminder is due.

Press the RECORD button to schedule a recording. The LED will switch automatically to the scheduled program and record it when the recording is due.

Time Shift Function

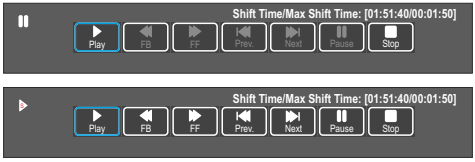

With the **Time Shift** Function you can pause a program while it is broadcasted and continue to watch it again at your convenience. The maximum time shift depends on the USB-memory or hard drive size.

To start the Time Shift while watching a program press the PLAY/PAUSE button to start the time shift, the LED will start recording the program and a menu indicating that is displayed. To continue watching the program press PLAY/PAUSE again and the LED will continue to play the program from where it was paused and a menu will be displayed where you can control differenct functions such as pause, fast forward and stop etc.

Design and specifications are subject to change without notice.

Menu > Picture

Use the Picture menu to adjust the picture settings to meet your requirements:

Menu > Picture > Picture mode

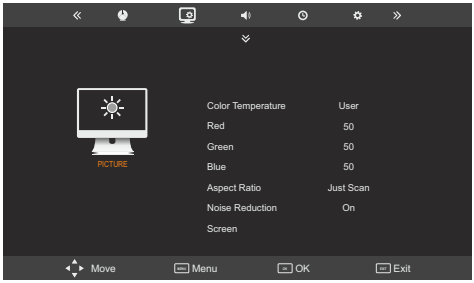

Choose between predefined settings:
Standard: Suitable for a normal room
Dynamic: Suitable for a bright room
Mild: Suitable for a dark room
User: In Personal mode you can adjust the Contrast, Brightness, Color, Sharpness and Tint to meet your own requirements.

Menu > Picture > Color Temperature

Choose between predefined settings (User, Cool, Medium, Warm). In User mode you can adjust the Colors Red, Green and Blue.

Menu > Picture > Aspect Ratio

Choose the desired Aspect Ratio. Available options are Auto, 4:3, 16:9, Zoom1, Zoom2, Panorama and Just Scan (1:1).
In PC Mode, only "16:9" and "4:3" mode can be adjusted.

Menu > Picture > Noise Reduction

Choose to activate noise reduction. Available options are On, Mild, Medium, High and Off.
If the broadcast signal received by your TV is weak, you can activate the Noise Reduction feature to help reduce any static and ghosting that may appear on the screen.

Menu > Picture > Screen (only in PC mode)

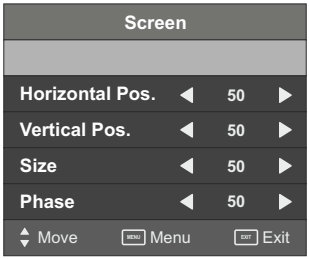

When the TV is in PC-Mode additional settings are available for PC-Setup.

Horizontal Pos.: Adjust the PC's screen positioning horizontally
Vertical Pos.: Adjust the PC's screen positioning vertically
Size: Adjust the screen sizeclock
Phae: Adjust the signal phase

Menu > Sound

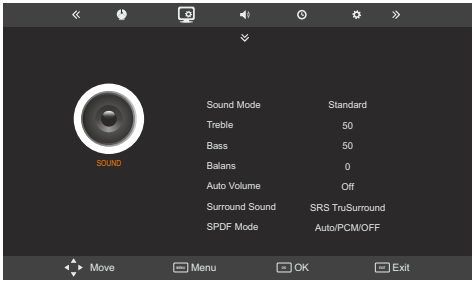

Use the Sound menu to adjust the sound settings to meet your requirements:

Menu > Sound > Sound Mode

Choose between predefined settings: **Standard:** Suitable for normal programs
Movie: Suitable for movies
Sport: Suitable for sport programs
Music: Suitable for music program
User: In Personal mode you can adjust the Treble and Bass to meet your own requirements.

Menu > Sound > Balance

Adjust the sound output balance between left and right speaker.

Menu > Sound > Auto Volume
Each broadcasting station has its own signal conditions, and so it is not easy to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

Menu > Sound > Surround Sound
When ON it delivers a compelling, virtual surround sound experience through any two-speaker playback system, including internal television speakers. It is fully compatible with all multichannel formats.

Menu > Sound > SPDIF Mode
Choose the output mode for the SPDIF signal. Choose between Auto, PCM an Off.

Menu > Sound > EQ

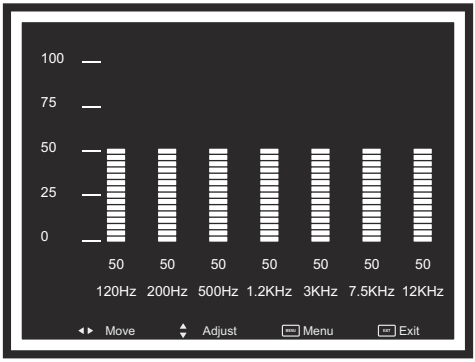

Choose the equalizers to do fine tuning for the audio output. *Not available in all models.*

Menu > Time

Use the Time menu to set the TV time and adjust some other settings related to time settings.

Menu > Time > Clock
Adjust the time.

Menu > Time > Off Time
Set a certain time to turn **off** the TV automatically. The available time intervals are **Once, Everyday, Mon-Fri, Mon-Sat, Mon-Sun** and **Sunday.**

Menu > Time > On Time
Set a certain time to turn **On** the TV automatically. The available time intervals are **Once, Everyday, Mon-Fri, Mon-Sat, Mon-Sun** and **Sunday.**

Menu > Time > Sleep Timer
Set the TV to turn off after a certain time. The time intervals are **240, 180, 120, 90, 60, 30, 20 and 10 min.**

Menu > Time > Auto Sleep
When set to ON the TV will turn off automatically if no input signal is detected otherwise the TV will remain ON even if no input signal is detected.

Menu > Time > Time Zone
Adjust the Time Zone according to GMT Standard.

USB Media Player

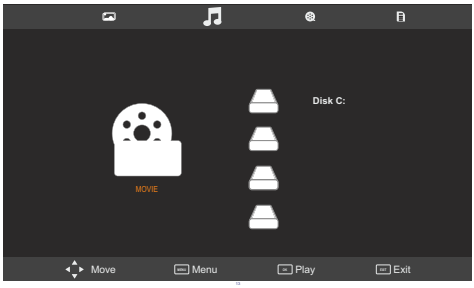

This product is
equipped with high end USB Media Player. It is capable of playing music, movies (up to 1080p and with subtitle support), and display photos or text documents.

To Enter USB mode
Press Source
Choose USB
Press Enter

In USB mode you can choose between:
Photos: Enables you to display several formats of photos and images
Music: Enables you to play several formats of music and audio files
Movie: Enables you to play several formats of movies and video files
Text: Enables you to display TXT files

Remote Control Keys used in USB Mode

The INFO button will display available controllers where it is possible to i.e. rotate an image. The controllers may vary depending on the USB mode.

Navigation Key to navigate in the different position of the menu and press enter to activate the function.

The AUDIO button will alter audio track (if several audio tracks are available in the played file).

The SUB-T button will alter the subtitles or turn it off (if several subtitles languages are available in the played file).

The subtitle file should be saved in UNICODE In order to display the correct characters.

Functions

- Repeat A.. — Repeat the file
- Goto TL. — Go to defined time position in the file
- Repeat A.. — Repeat the file. Choose between ALWAYS, ONCE or NO REPEAT
- Music — Play audio files while displaying images
- Playlist — Display the Playlist
- Info. — Display current file's information
- Rotate — Press to rotate 90 degrees CW
- Rotate — Press to rotate 90 degrees CW
- Zoom in — Press to Zoom IN
- Zoom out — Press to Zoom OUT
- Move view — Press to MOVE in ZOOM mode
- Set A — Define a part of a video to be repeated
- Aspect Re.. — Change aspect ratio
- Step Fo.. — Play step forward in a video
- Slow Fo.. — Play slowly forward in a video

Text-TV / Teletext

Most television stations provide written information services via Teletext. The index page of the teletext service gives you information on how to use the service. In addition, you can select various options to suit your requirements by using the remote control buttons.

TTX ON
Press TTX ON to enter Text-TV
Press TTX ON to exit Text-TV

INDEX
Used to display the index (contents) page at any time while you are viewing teletext.

SIZE
Press to display the double-size letters in the upper half of the screen. For lower half of the screen, press it again. To display. normal screen, press it once again.

REVEAL
Used to display the hidden text (answers to quiz games, for
example). To display normal screen, press it again.

MIX
Press to activate teletext mode after selecting the channel providing the teletext service. Press it twice to overlap the teletext with the current broadcasting screen.

HOLD
Used to hold the display on a given page if the selected page is linked with several secondary pages which follow on automatically. To resume, press it again.

CANCEL
Used to display the broadcast when searching for a page.

Red/Green/Yellow/Blue
If the FASTTEXT system is used by a broadcasting company, the different topics covered on a teletext page are color coded and can be selected by pressing the colored buttons. Press one of them corresponding to the required. The page is displayed with other colored information that can be selected in the same way. To display the previous or next page, press the corresponding colored button.

Design and specifications are subject to change without notice.

Product base assembly

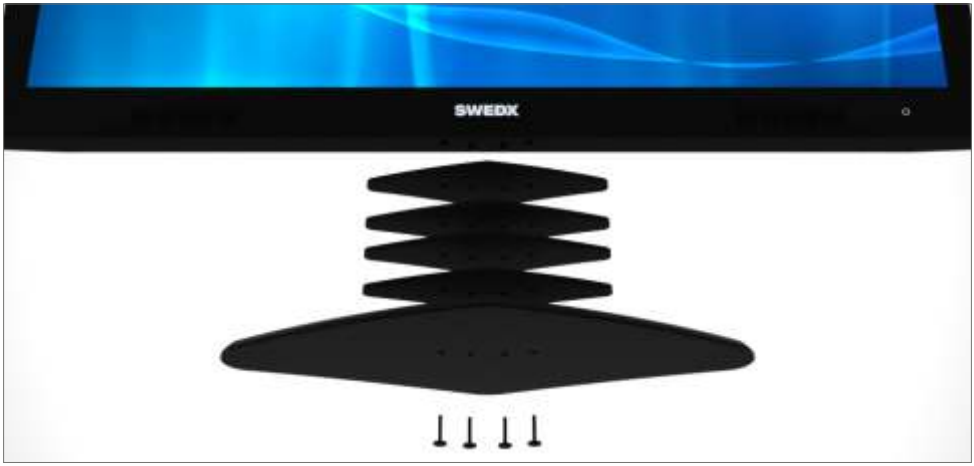

To assemble the base with the product review the illustration to the right. Use the screws included in the base box.

Notice: ***Make sure to avoid any damages to the LED panel when you assemble the product with the base.***

Wall mount assembly

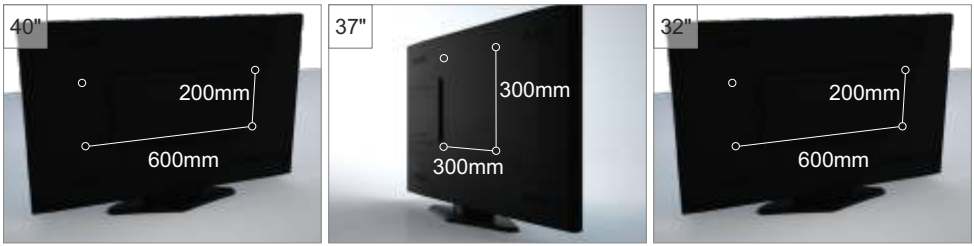

SWEDX offers several wall mount devices which can be purchased from your dealer or www.swedx.com

To assemble the wall mount with the product review the illustrations above.

Notice: ***Make sure to avoid any damages to the LED panel when you assemble the wall mount.***

Troubleshooting

Before contacting SWEDX service or your dealer, perform the following simple checks. If you cannot solve the problem using the instructions below, note the model and serial number of your product and contact your local dealer

No sound or picture
- Check that the mains lead has been connected to a wall socket
- Check that you have pressed the POWER button on the front of the TV
- Check the picture contrast and brightness settings
- Check the volume

Normal picture but no sound
- Check the volume
- Check whether the MUTE button has been pressed on the remote control

No picture or black and white picture
- Adjust the color settings
- Check that the broadcast system selected is correct

Sound and picture interference
- Try to identify the electrical appliance that is affecting the set and move it further away.
- Plug your set into a different mains socket

Blurred or snowy picture, distorted sound
- Check the direction, location and connections of your aerial
- This interference is often due to the use of an indoor aerial

Remote control malfunctions
- Replace the remote control batteries
- Clean the upper edge of the remote control (transmission window)
- Check the battery terminals
- Turn off the TV and unplug the AC cable from the wall socket and then plug the AC cable and turn on the TV

“No signal” message is displayed
- Check that the signal cable is firmly connected to the source input
- Check that the source is turned on

On PC mode, “Not Supported Mode” message is displayed
- Check the maximum resolution and the frequency of the video adapter. For HD models the recommended resolution is 1366x768 and for Full HD models the recommended resolution is 1920x1080

The image is too lightor too dark
- Adjust the Brightness and Contrast

Pixel Mapping
- It is recommended to choose aspect ratio JUST SCAN to achieve pixel mapping in HDMI modes

Warranty and Service
The following terms apply only to new "in the original carton" SWEDX products marketed and distributed by SWEDX, which are purchased and used by the original consumer purchaser.

Depending on the model, your terms and conditions may be different from those shown below, and this information is subject to change without prior notice. Unless specifically stated otherwise, used and reconditioned products that are resold have no warranty from SWEDX and are considered sold "AS-IS", however, the selling dealer may offer additional service options.

Warranty for SWEDX products:
Check with your dealer for the warranty period.

What the warranty covers:
SWEDX warrants your SWEDX display(s) against defects in material and workmanship during the warranty period from SWEDX factory delivery date shown in the shipping documents. If a product proves to be defective in material or workmanship during the warranty period, SWEDX will, at its sole option repair or replace the product with a similar product, provided the purchaser adheres to certain return authorization procedures and guidelines. SWEDX reserves the right to charge customer in case of warranty conditions not are fulfilled.

Who the warranty protects:
This warranty is valid only for the first purchaser.

What the warranty does not cover:
1. Any product which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
   A. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
   B. Repair or attempted repair by anyone not authorized by SWEDX.
   C. Any damage of the product due to shipment.
   D. Removal or installation of the product.
   E. Causes external to the product, such as electric power fluctuations or failure.
   F. Use of supplies or parts not meeting SWEDX specifications.
   G. Normal wear and tear.
   H. Any other cause which does not relate to a product defect.
3. Cosmetic damage by purchaser, such as markings, discoloration, scratches, dents, anti-theft devices markings, gouges or any other defacement.
4. Physically damaged products by purchaser, such as broken PCB, Housing, damaged LED Module.
5. No Defect Found (product returned to SWEDX as defective but failure is not duplicated by SWEDX's test method.)
6. The product is not in accordance with the fault in the application
7. Timber is a lifelike natural material which can cause some little changes in the precision of the produced product such as small openings line beside the connecting point and some other small changes which are out of SWEDX control and don't make any effect for the product functionality.

Dead on Arrival (DOA)
If the product fails within the manufacturer's DOA period, a replacement product will be offered.

Before contacting us:
In many cases, your TV may not need repair. Before you contact us, please consult the troubleshooting section in your user's manual or SWEDX's FAQ web pages at http://www.swedx.com to see if you can easily remedy the problem yourself.

How to get service:
For information on obtaining warranty service, contact SWEDX dealer (the place where you bought your product) in first choice. If for any reason you can not contact your dealer, please contact SWEDX Customer Service by visiting http://www.swedx.com.

SWEDX technical support services:
During the period of product warranty, we support your basic configuration, setup and troubleshooting questions, and when required, we provide you with all instructions on how to return your product for repair. For support inquiries, please visit http://www.swedx.com.

SWEDX reserves the right to make final decisions regarding problem determination and the appropriate service option. Exchange units assume the remaining warranty of the original product. Please refer to your SWEDX Limited Warranty Statement for complete terms and conditions, as some models have other terms and conditions. Some limitations and restrictions apply and these programs are subject to change without prior notice.

Limitation of liability
If your SWEDX product fails to work as warranted above, your sole and exclusive remedy shall be repaired or replaced. SWEDX's maximum liability under this limited warranty is expressly limited to the lesser of the price you have paid for the product or the cost of repairing or replacement of any hardware components that malfunction in conditions of normal use. SWEDX is not liable for any damages caused by the product or the failure of the product to perform, including any lost profits or savings or special, incidental, or consequential damages. SWEDX is not liable for any claim made by a third party or made by you for a third party.

This limitation of liability applies whether damages are sought, or a claim made, under this limited warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if you have advised SWEDX.

SWEDX

www.swedx.com